


New Working New Living

Website: www.flexispot.com

Tel: 1-855-585-5618


Address: 6475 Las Positas Rd. Livermore, CA 94551

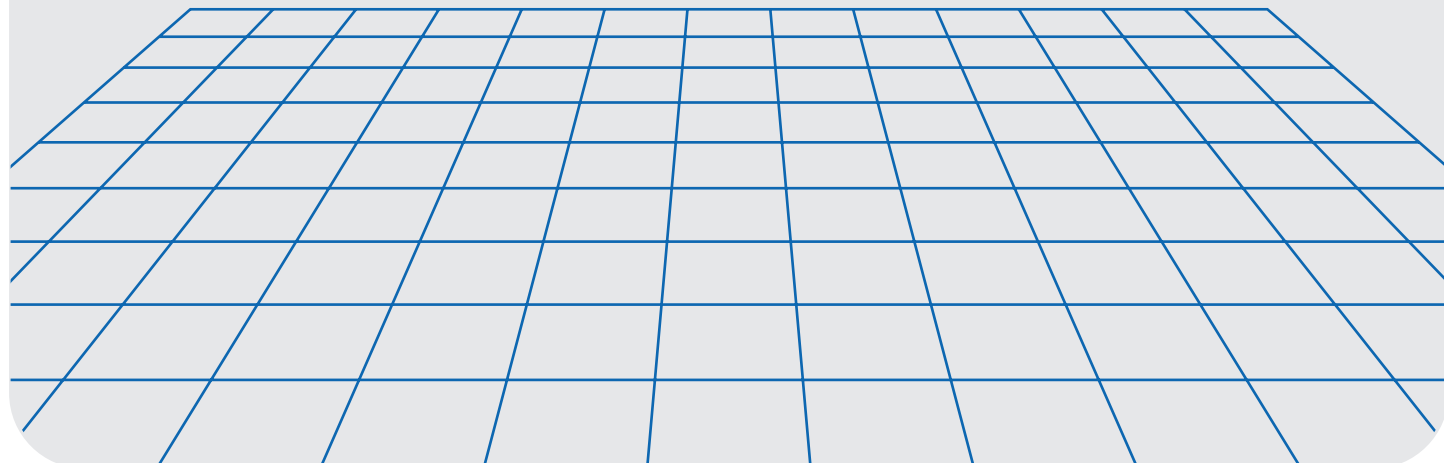

FlexiSpot

User Manual

Item No. CH4B

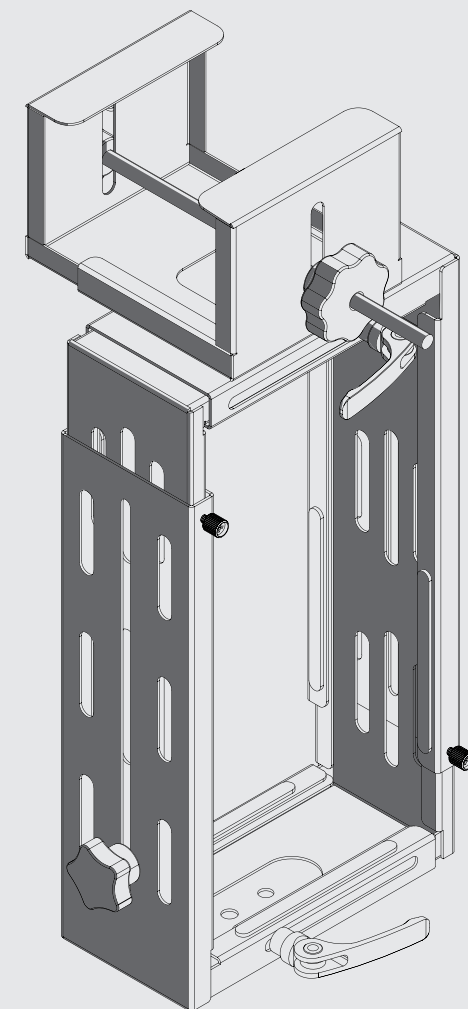

INSTRUCTIONS –
KEEP FOR FUTURE REFERENCE

Specifications


Product Dimensions	9.25×9.65×17.32"
Maximum Load	44.09 lbs



Safety warning :
1.Please read this manual carefully before use.
2.The product composed of recyclable metal and plastic material, take care of sharp item and do not swallow,especially small screws.
3.Indoor use only.


1

Stick anti slip pads in the position shown in the diagram.

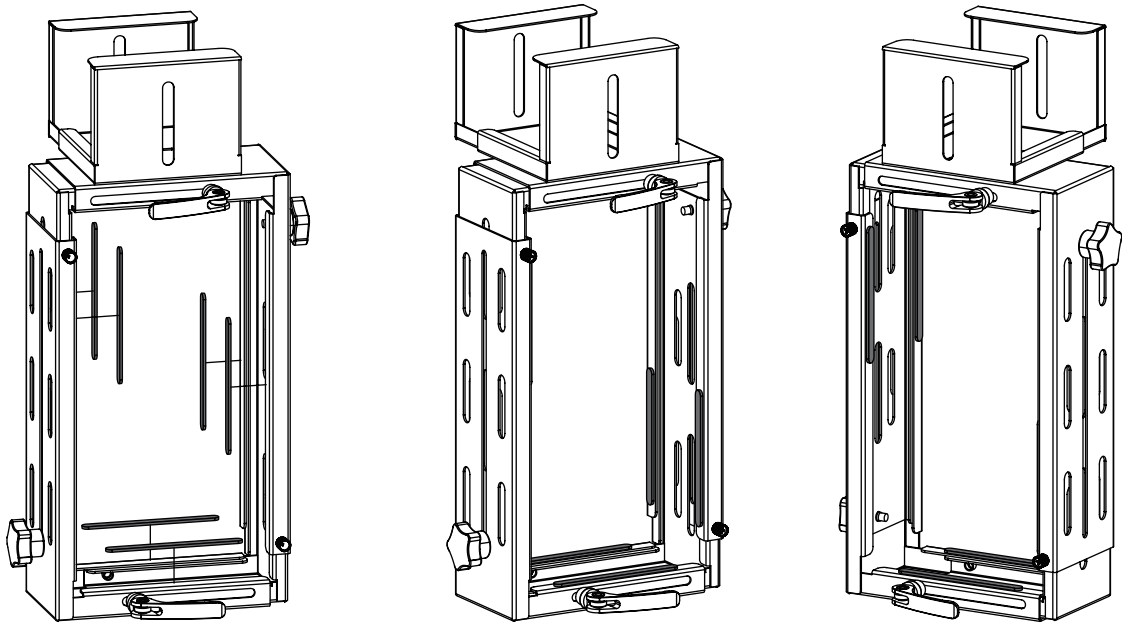


2

Tighten the nut clockwise.

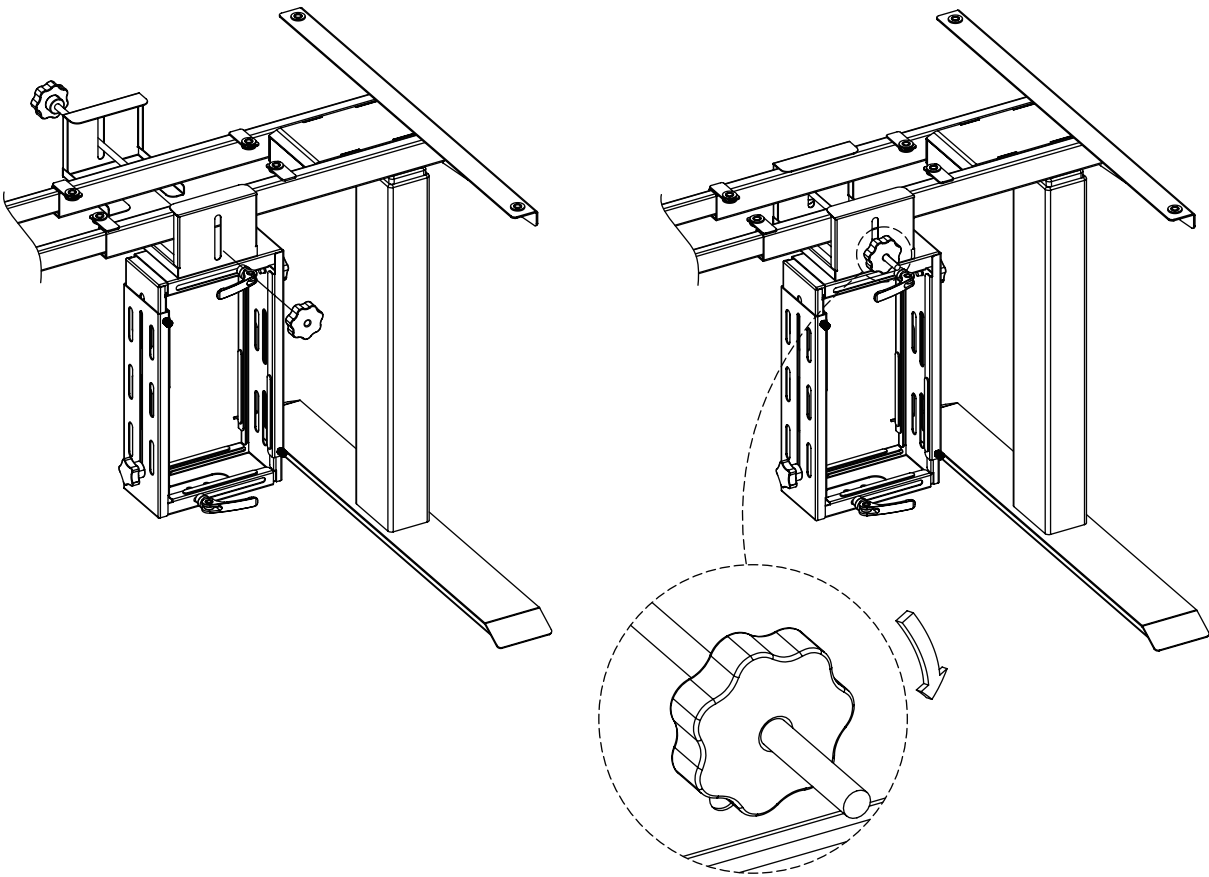

3

Loosen all the nuts and pre-adjust the size of the PC mount according to the actual size of the tower.

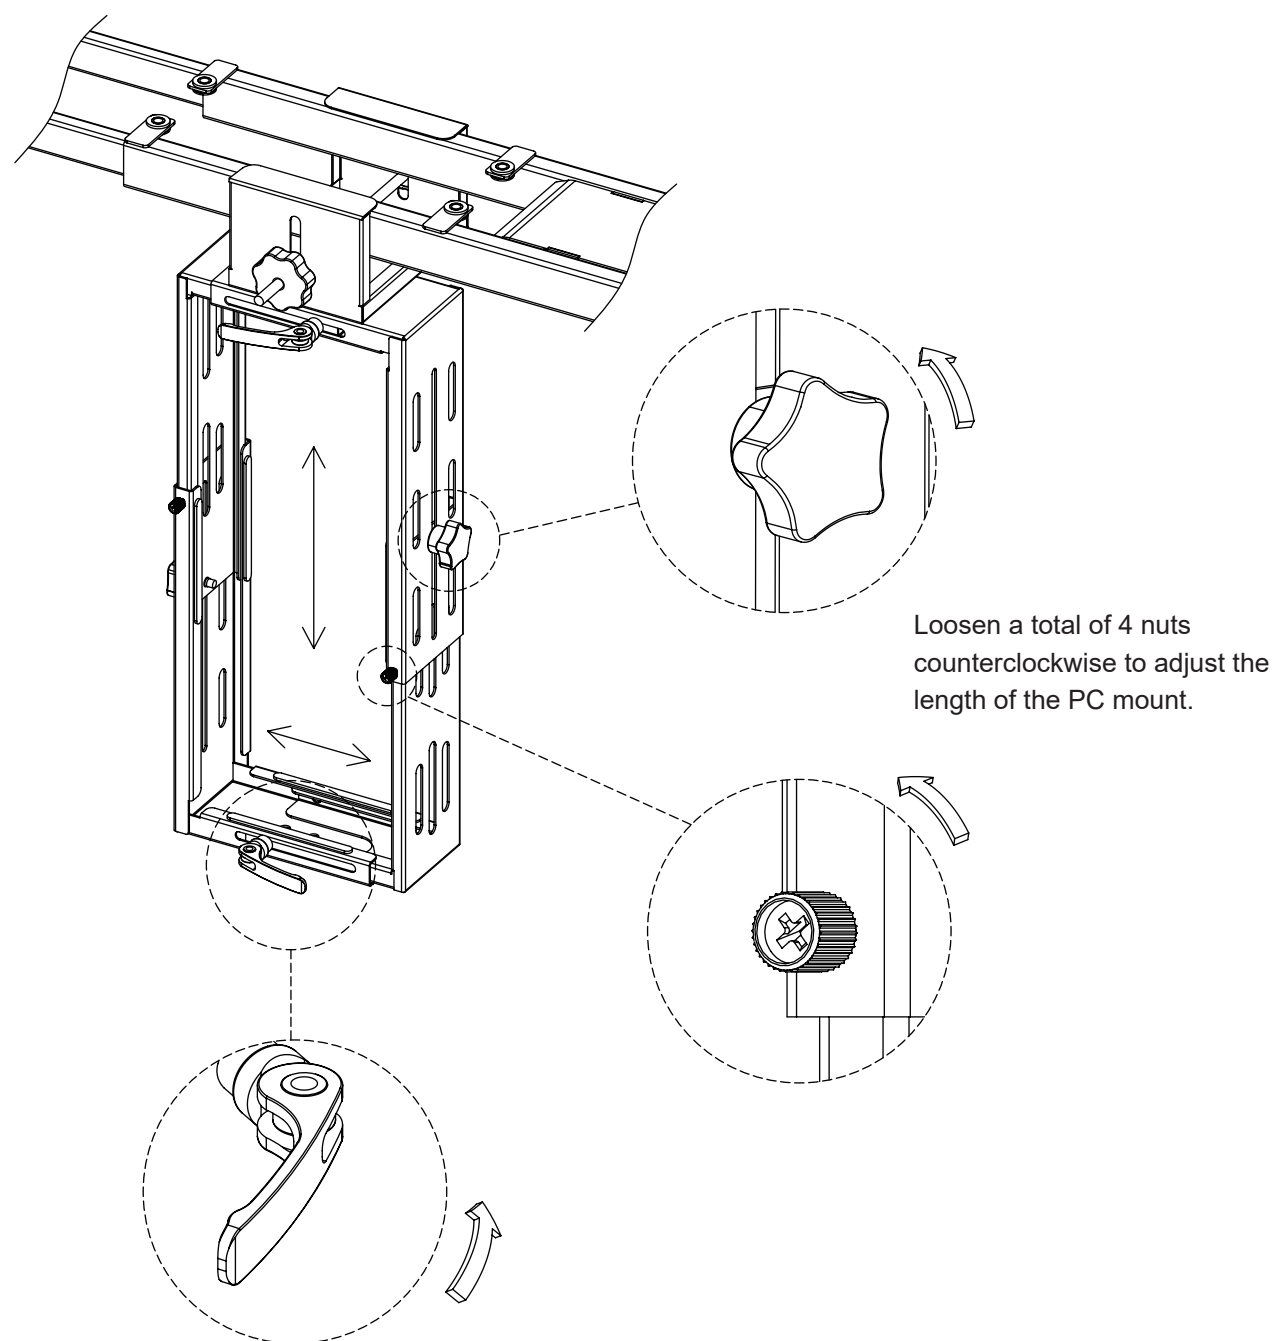


Loosen a total of 4 nuts counterclockwise to adjust the length of the PC mount.

Loosen the upper and lower quick-lock handles to adjust the width of the PC mount.

4

Place the tower. Then adjust the size of the PC mount to ensure that the two fit closely all sides. Finally, tighten all the nuts to secure it in place.

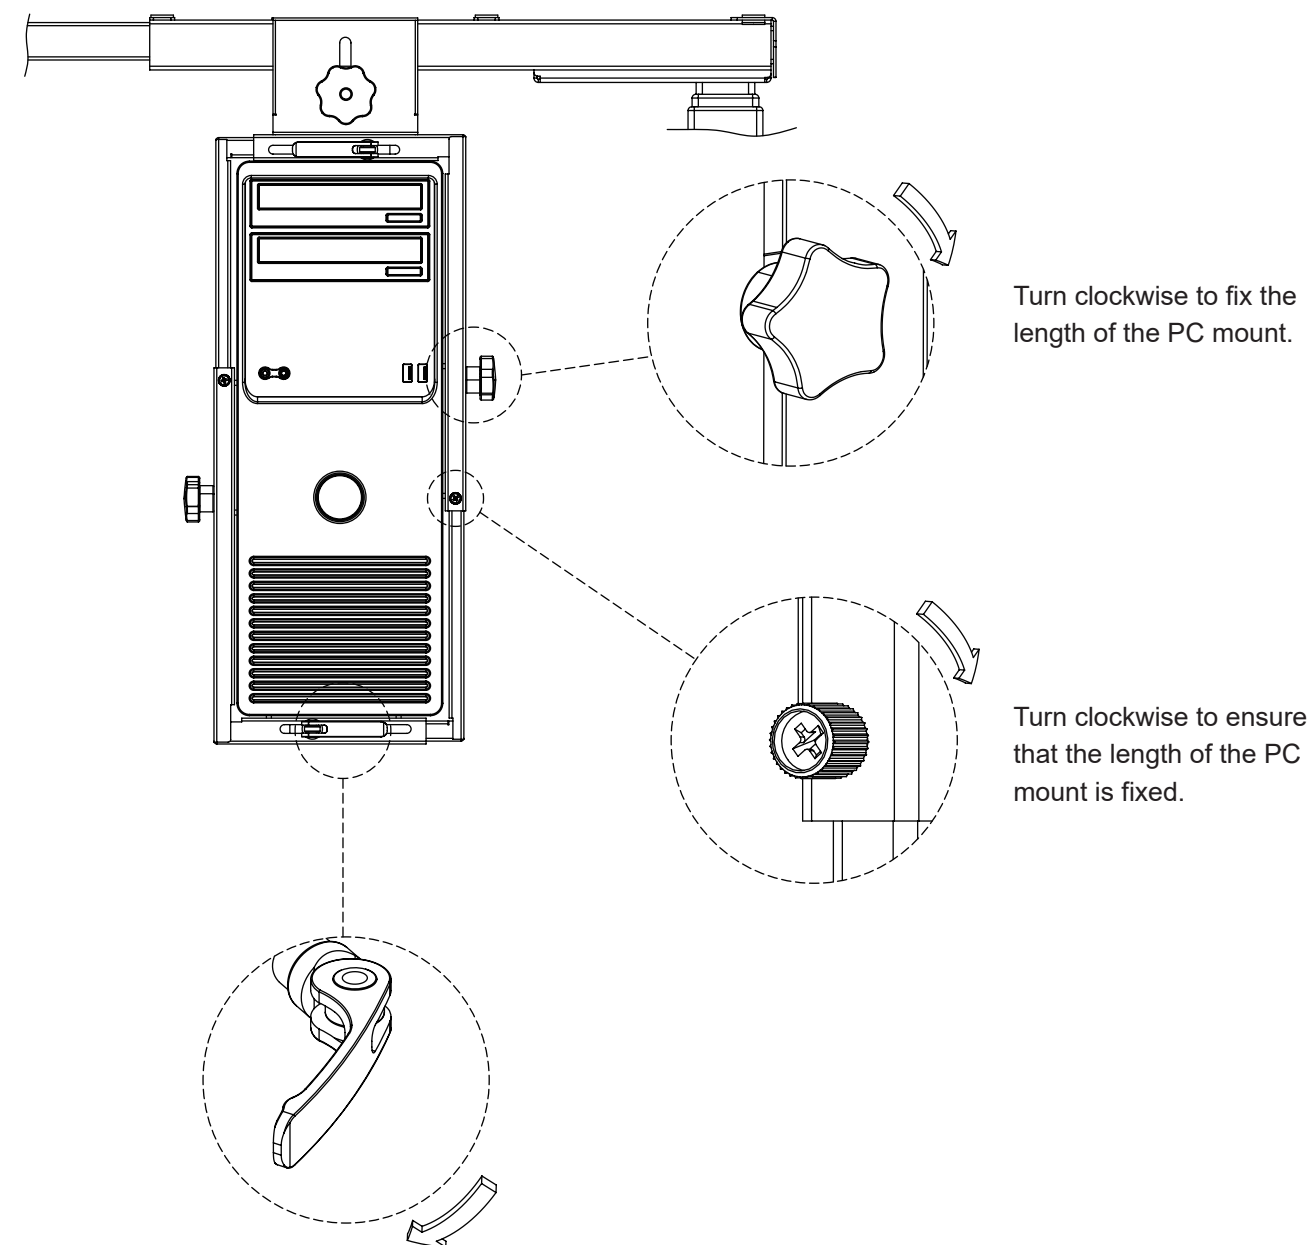

Turn clockwise to fix the length of the PC mount.

Turn clockwise to ensure that the length of the PC mount is fixed.

Close the upper and lower quick-lock handles to fix the width of the PC mount,