


New Working New Living

Website: www.flexispot.com

Tel: 1-855-585-5618


Address: 6475 Las Positas Rd. Livermore, CA 94551

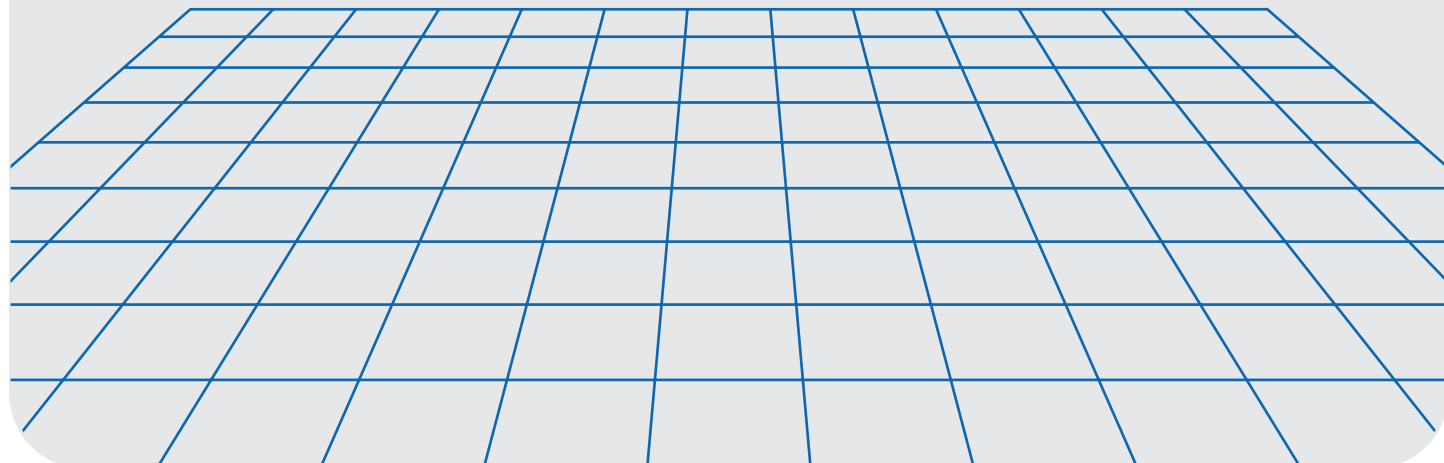

FlexiSpot

User Manual

Item No. FN22-R5927NO-DP

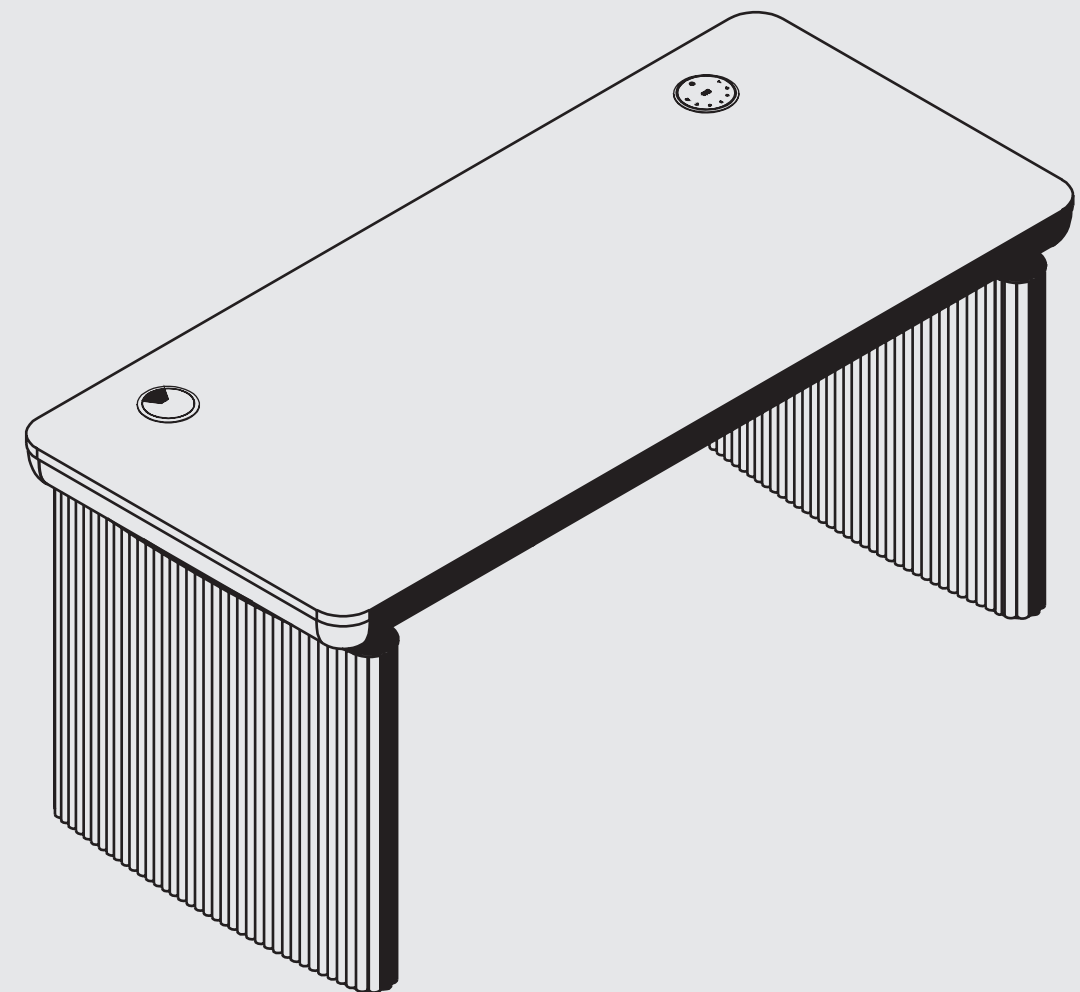


INSTRUCTIONS –
KEEP FOR FUTURE REFERENCE


Specifications

Max. Weight Capacity	100 lbs (45.4kg)
Speed	25mm/s
Input Voltage	100-240 V
Min. Height	28.7" (730mm)
Max. Height	46.5" (1180mm)
Duty Cycle	10% (Working 2 minutes then stop 18 minutes)
Certification	FCC,UKCA


Preparation before Installation

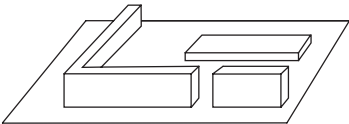

Install on carpet to prevent scratches.

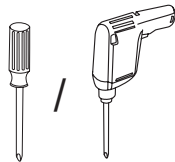


Bring your own phillips screwdriver or pistol drill.

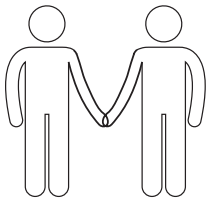


Need two or more people to cooperate together.

Accessory Package

 
PLEASE NOTE: Check that you have received all components and hardware before assembling. If you are missing any parts, please contact us for replacement parts.




A: 1/2"Small Machine Screw - 12+1(spare)

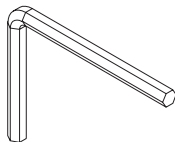

B: Wrench - 1

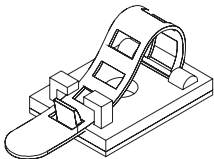


C: Adhesive - 2

 

D: 1/2"Flat Head Screw - 2



Diagram of Components

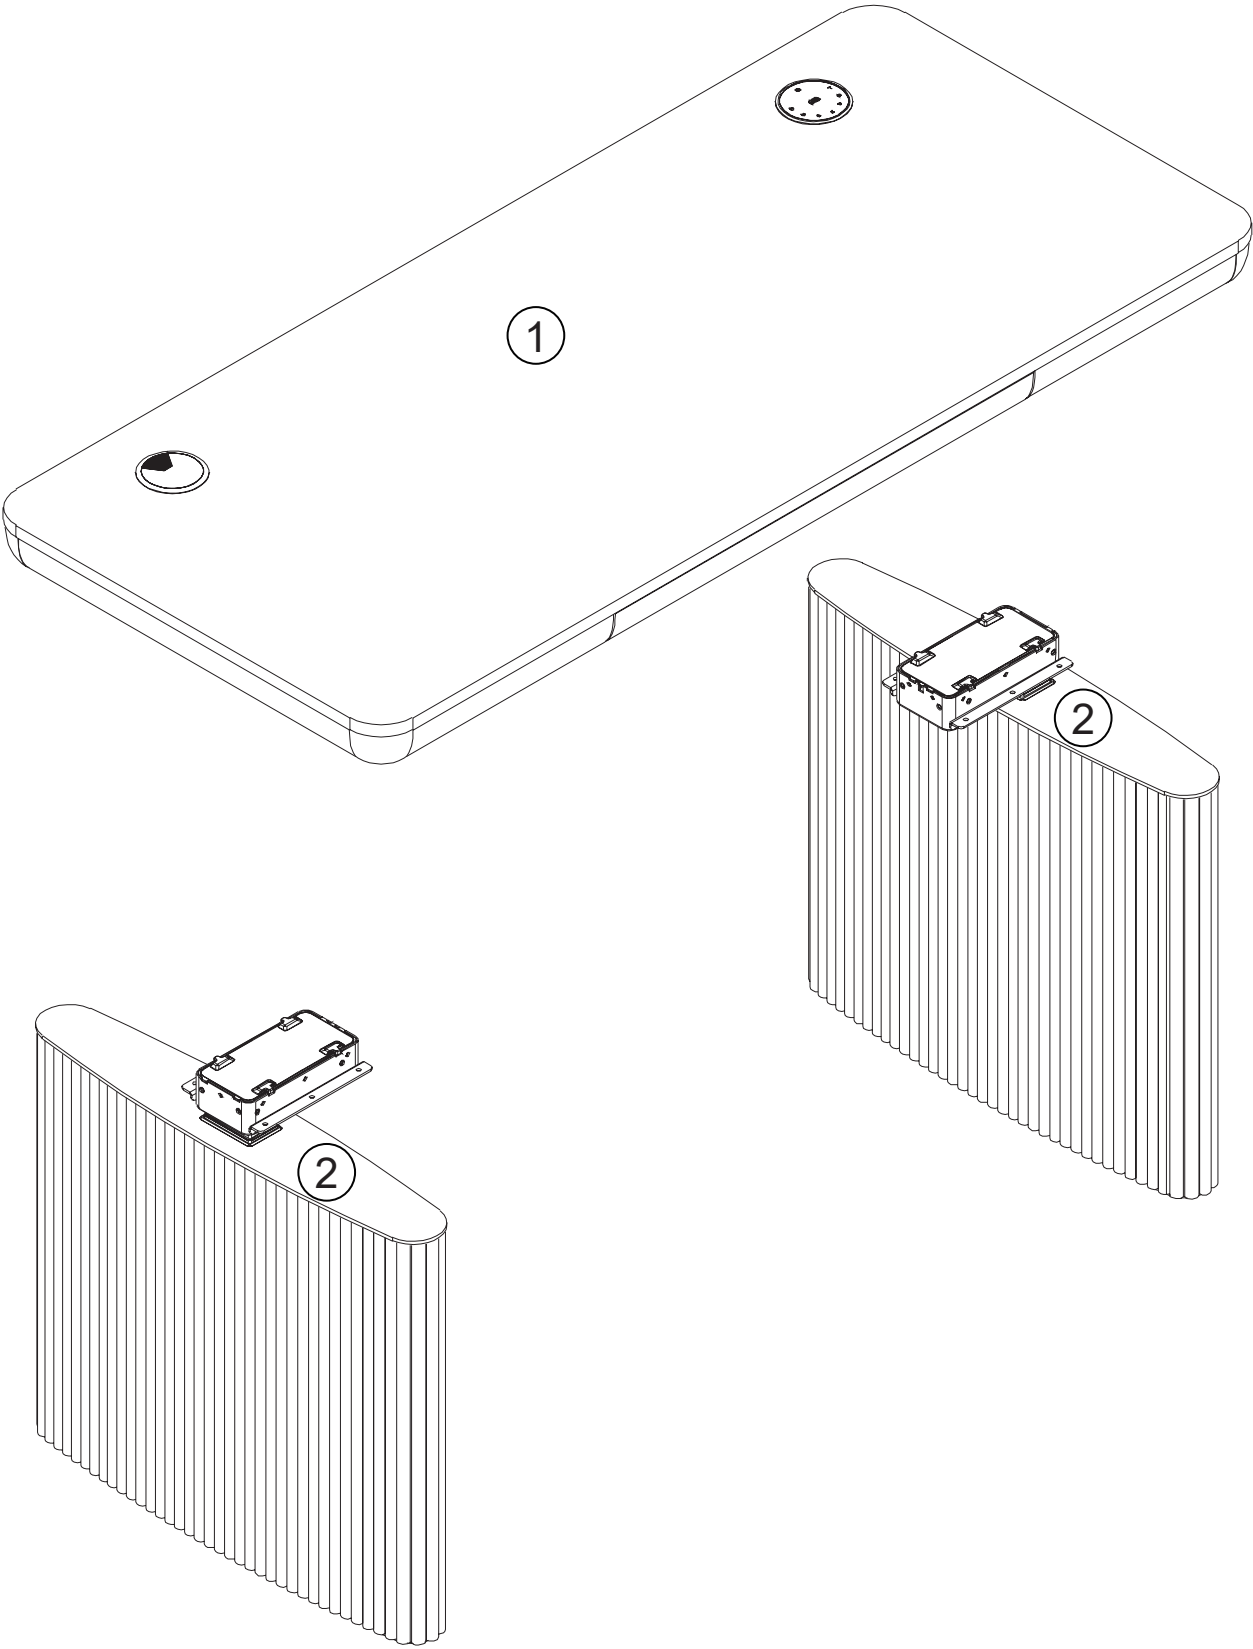


Assembly Steps

1


 
Note:
The operation takes two adults to complete.

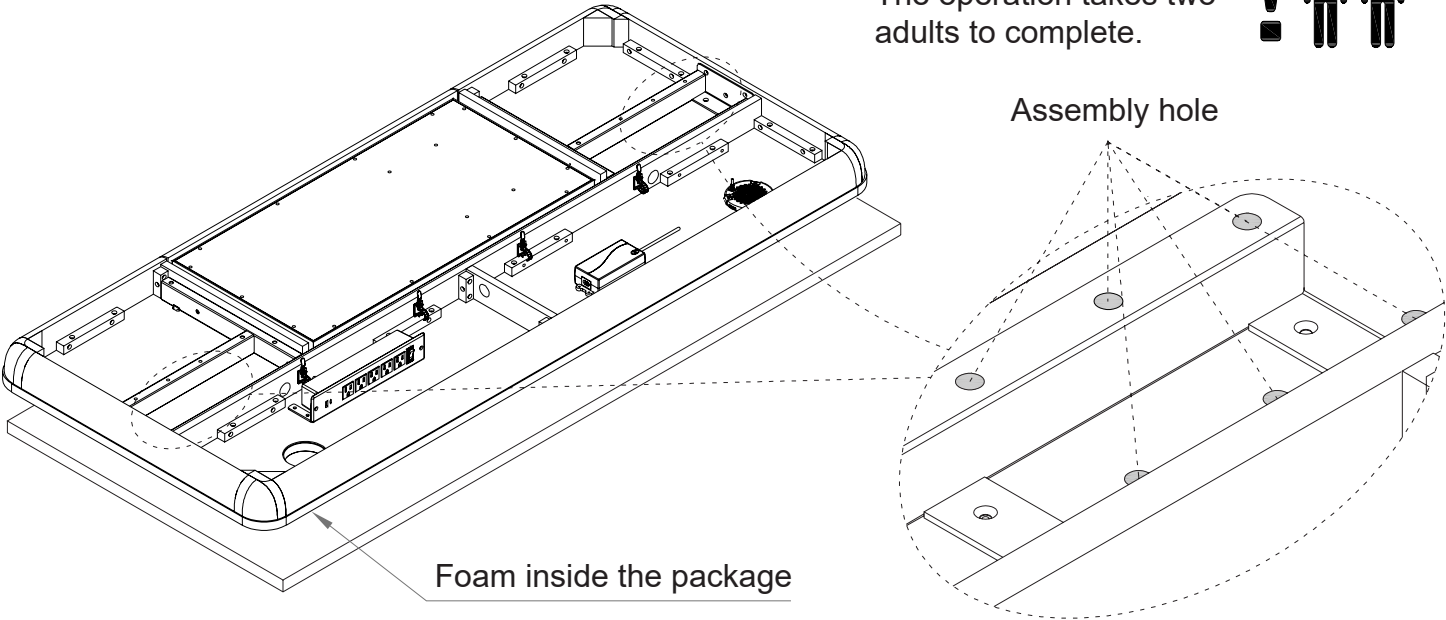


Place the foam pad from the packaging under the tabletop to protect it from damage during installation.

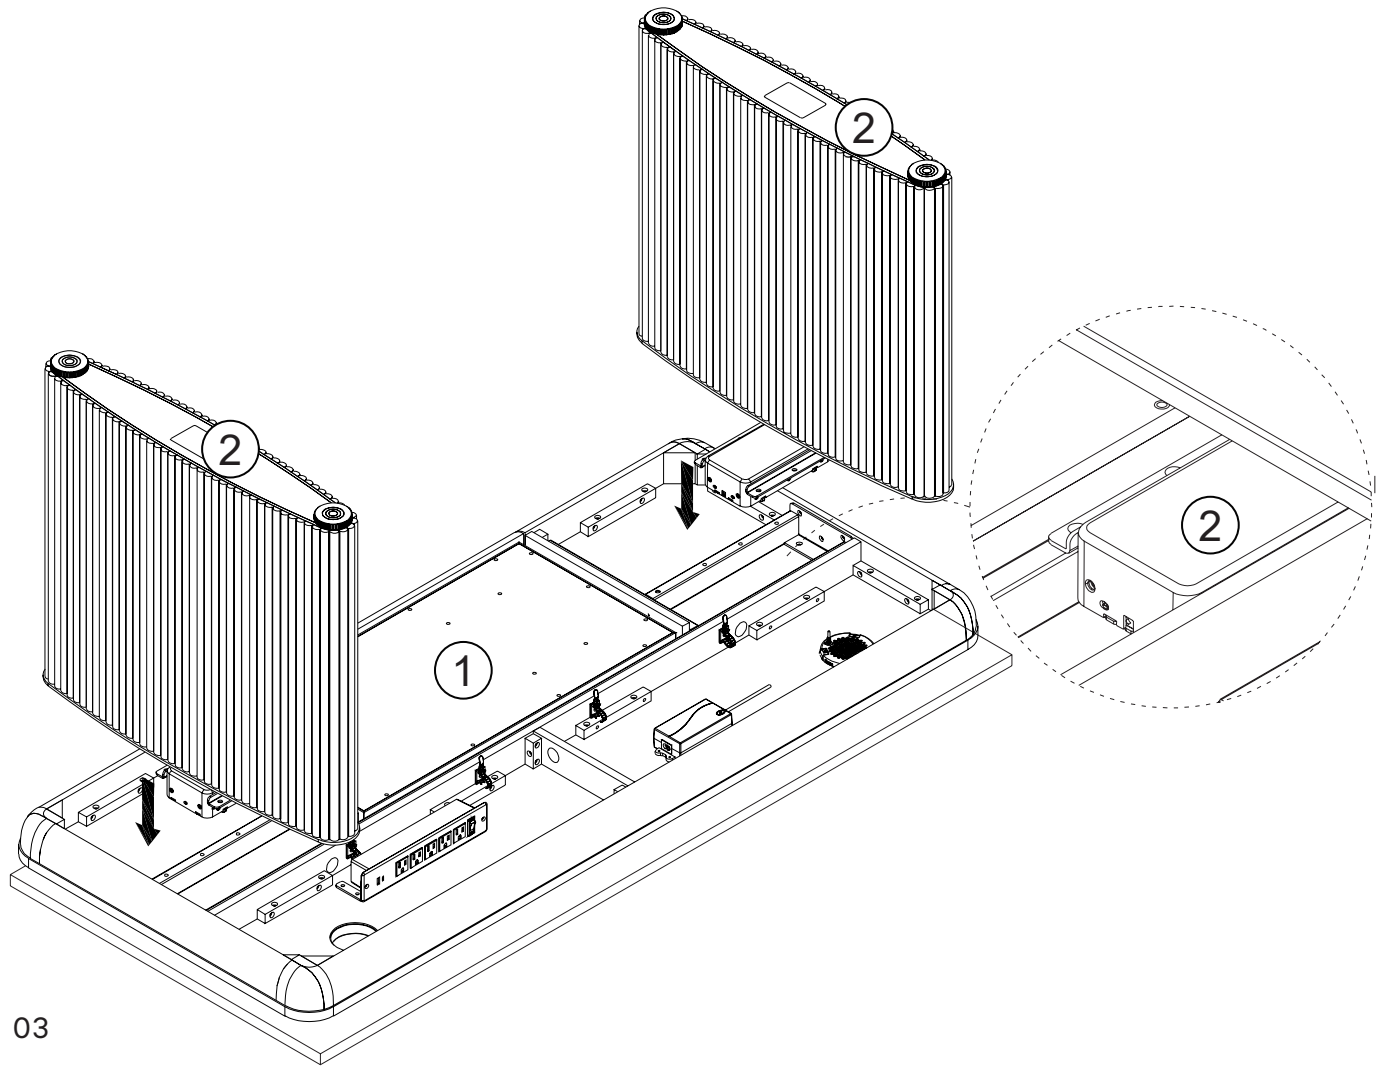

2

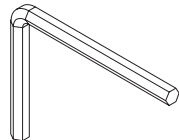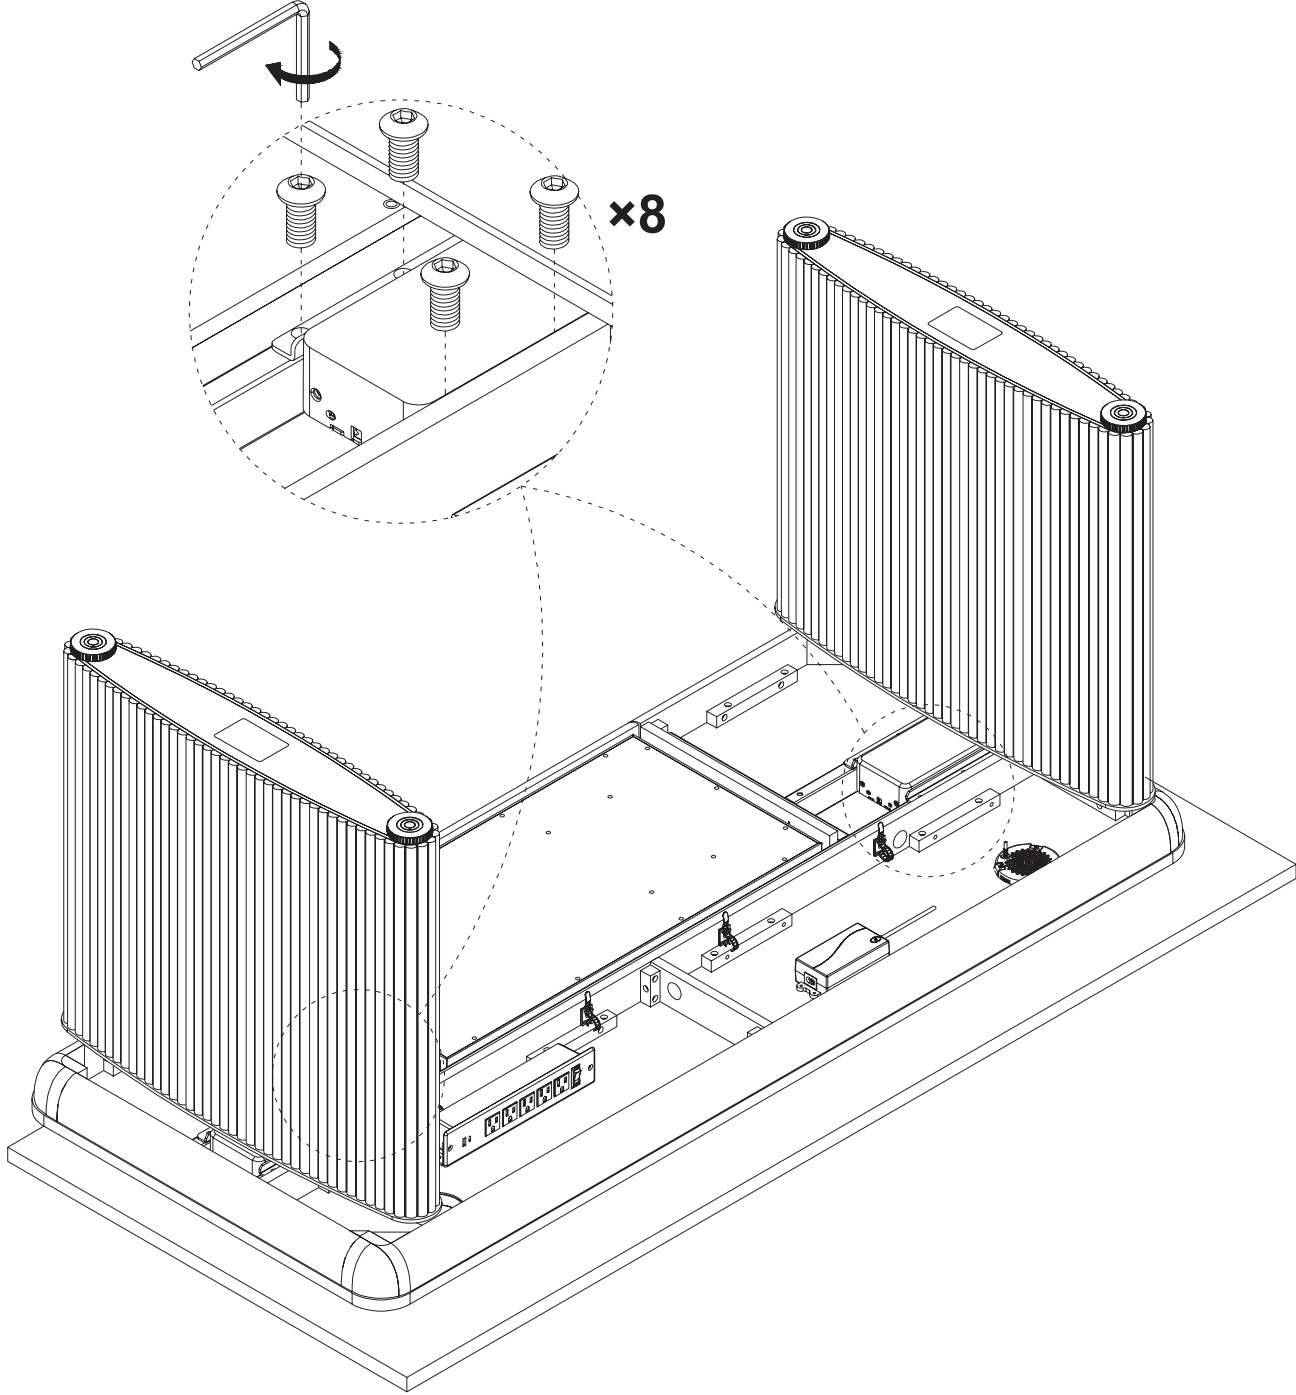


B: Wrench - 1

 


A: 1/2"Small Machine Screw - 8

3

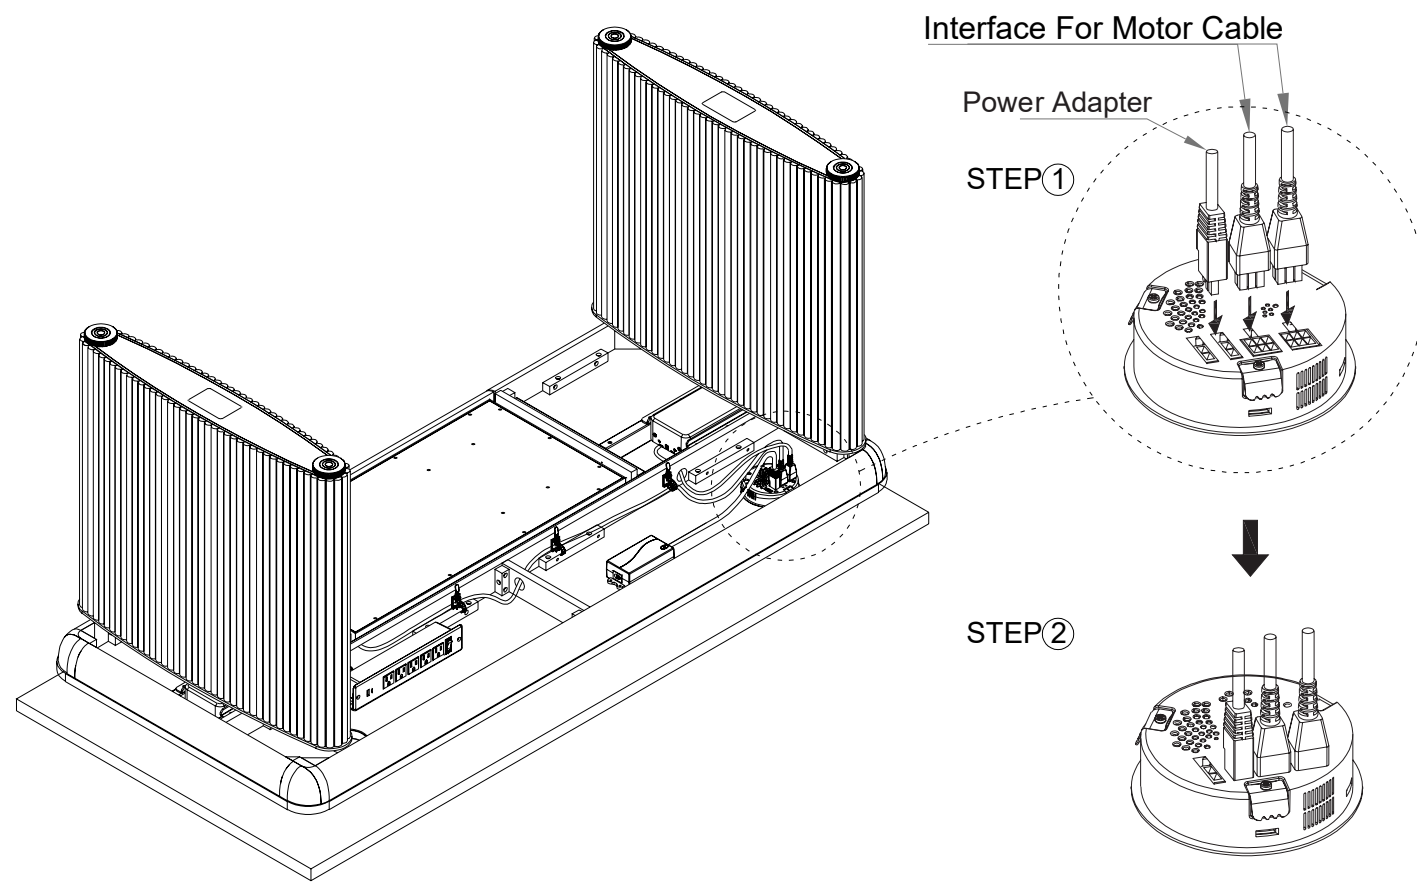



Connect the motor and adapter wires to the control box as shown.

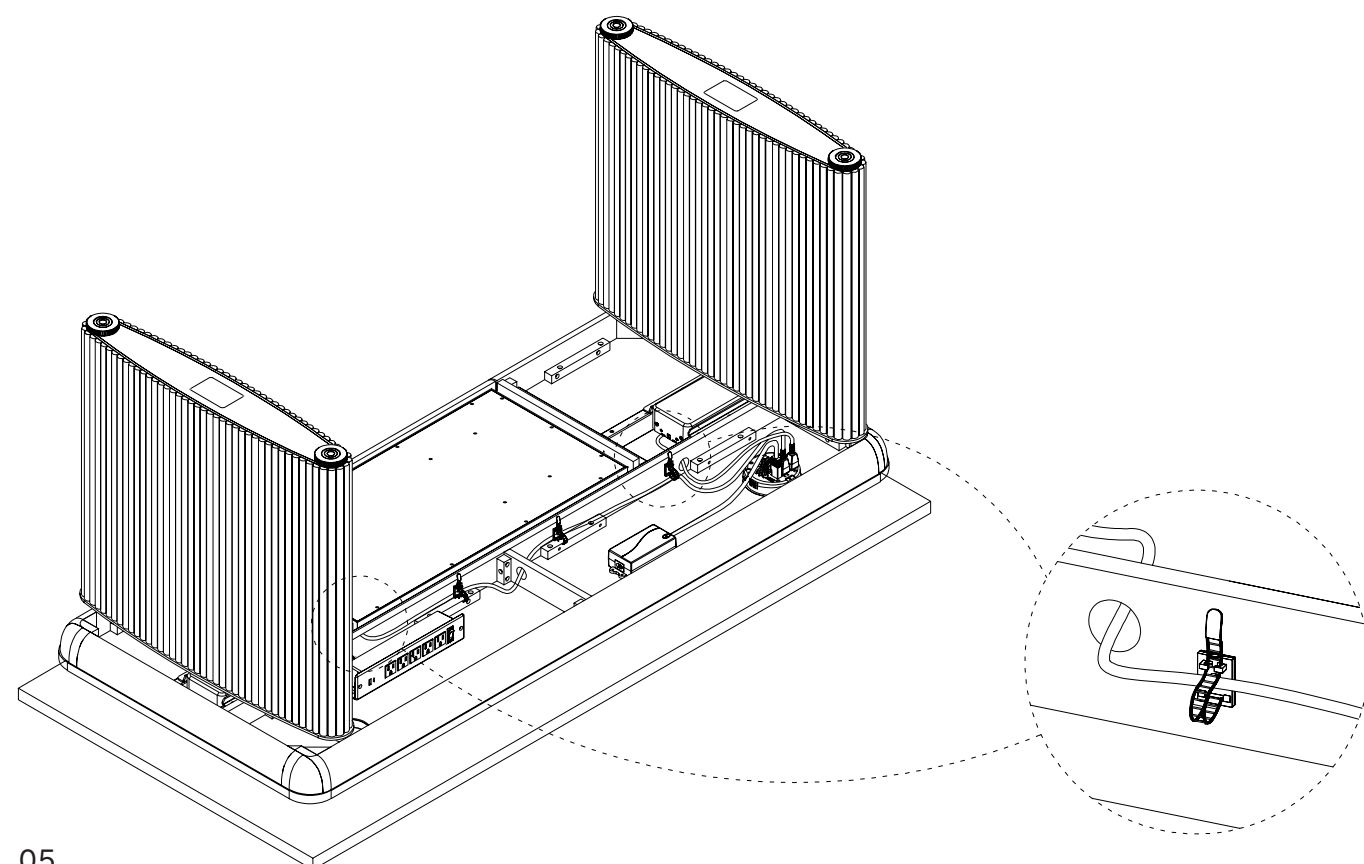

4


Flip the products forward in order, as shown.

 Note:
The operation takes two adults to complete.

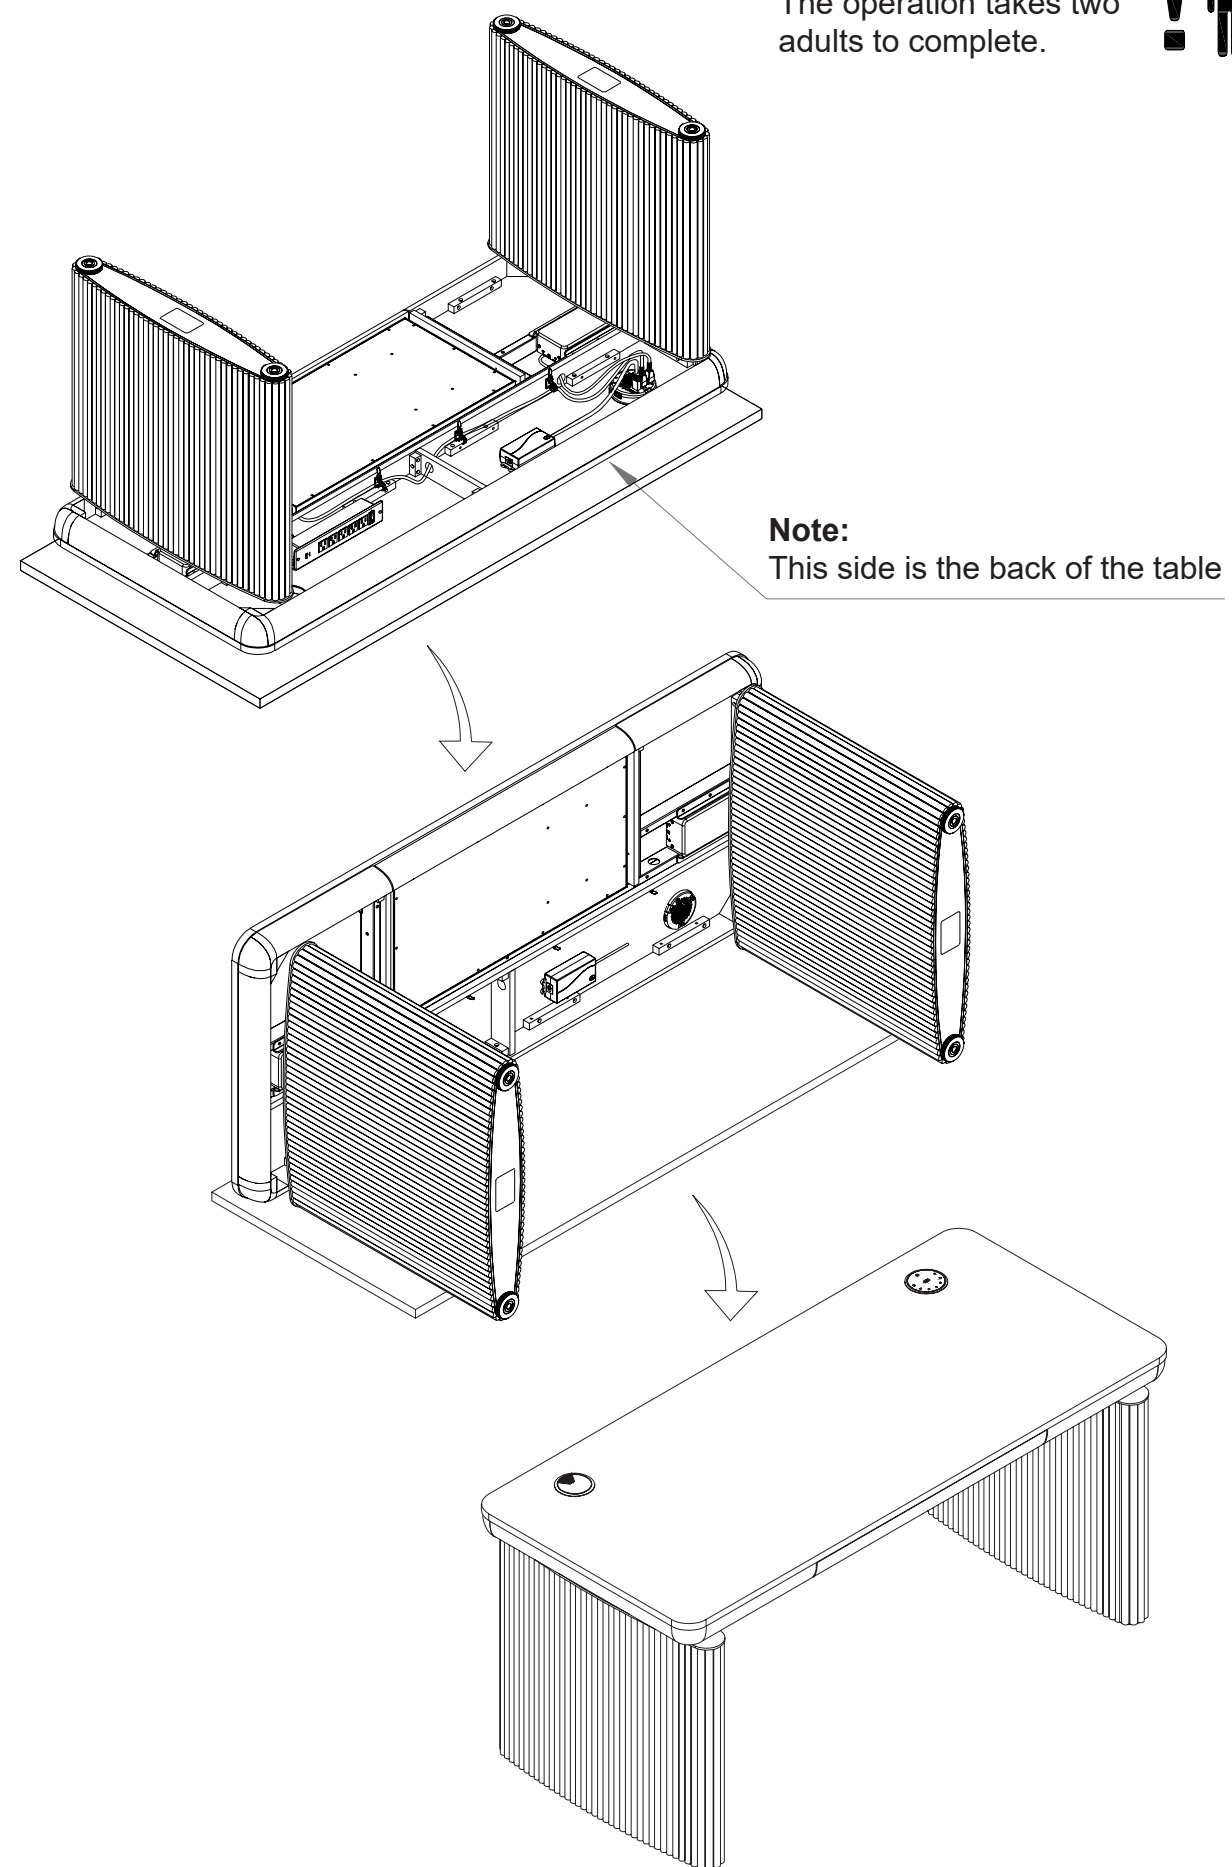


5

- 1.As shown in the figure, first connect the adapter to the power supply and turn it on.
- 2.The first operation of the controller requires a reset, which stops when the down button displays "LOW".
- 3.After resetting, press the "Up" button to raise the desktop to its highest position.


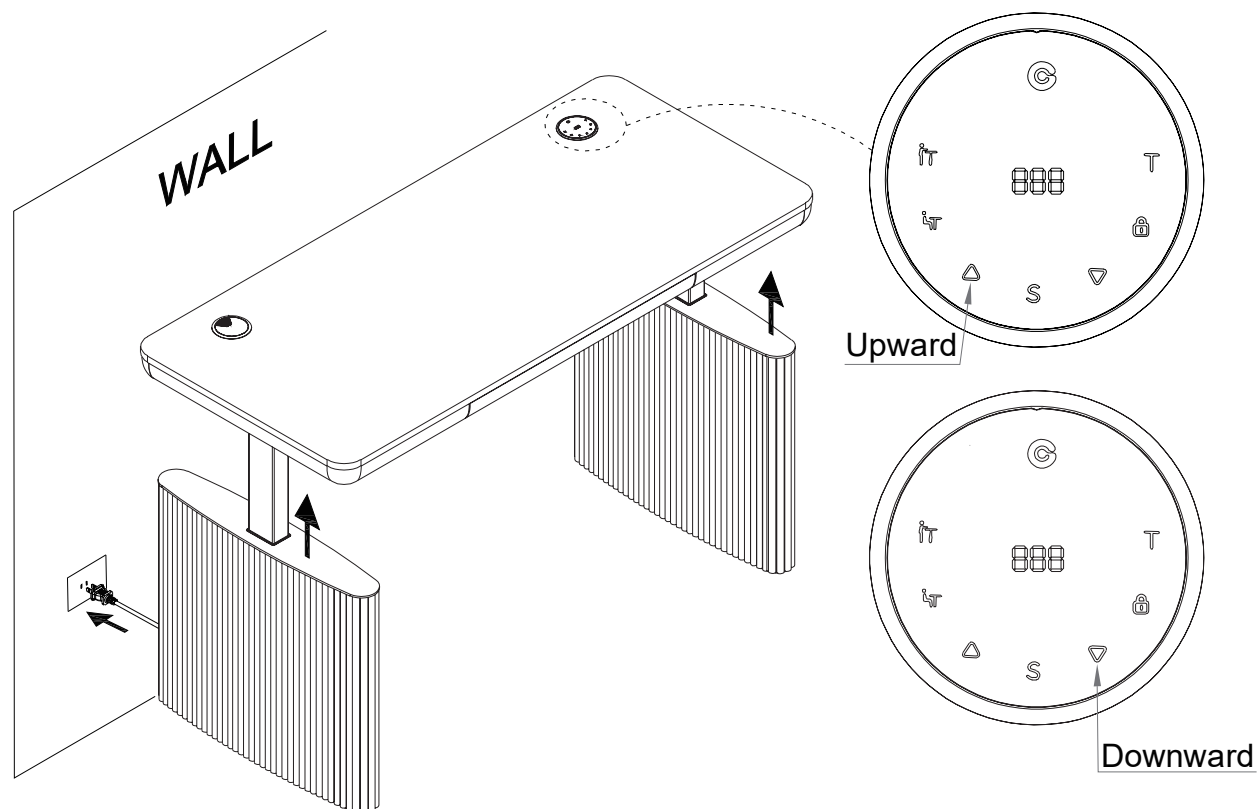


6

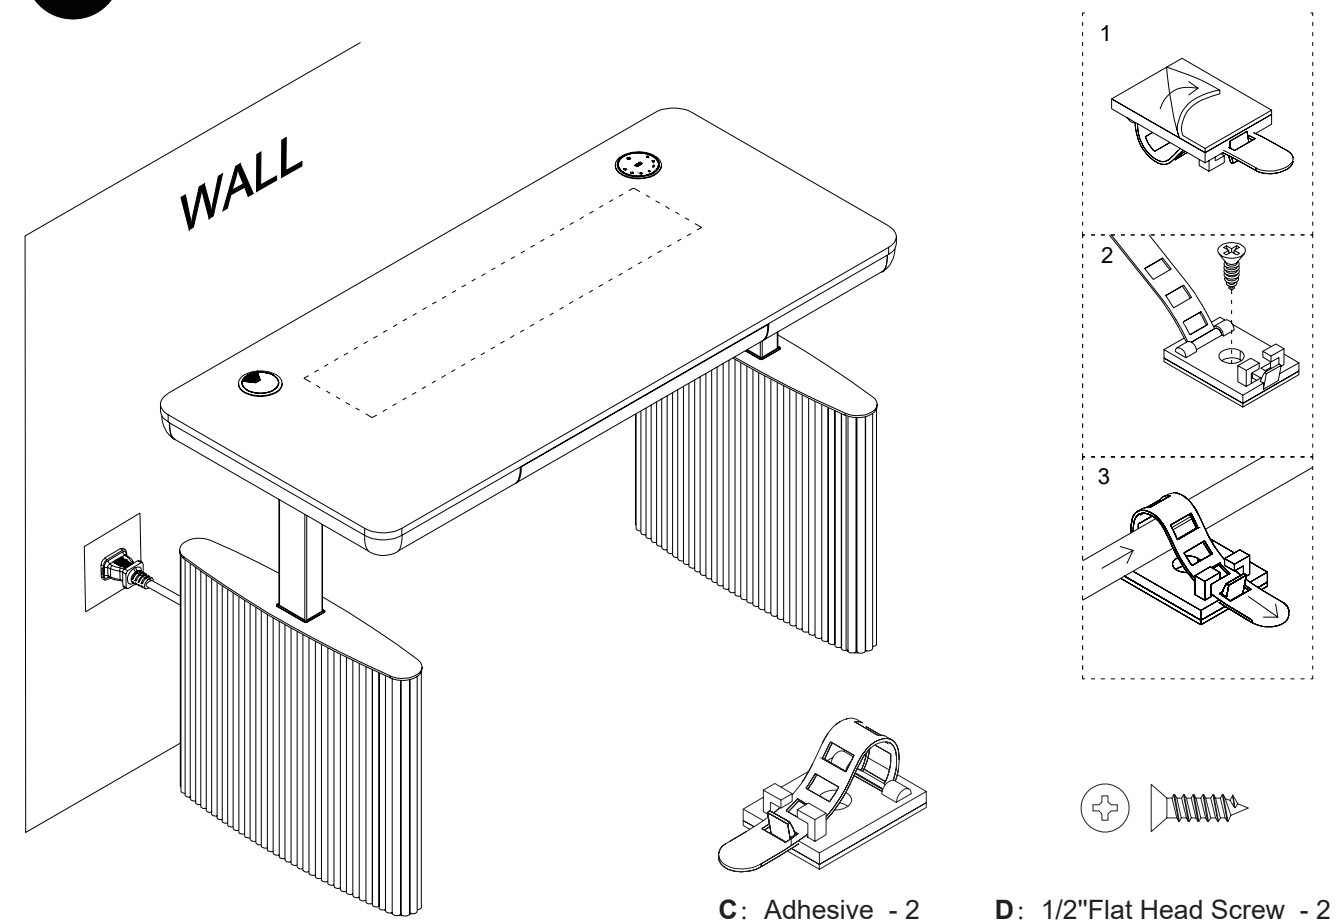


Option: You can choose to add installation accessory cable clips on the back of the table according to your preferences.

For more operational functions, please read the instructions on page 9 in detail.

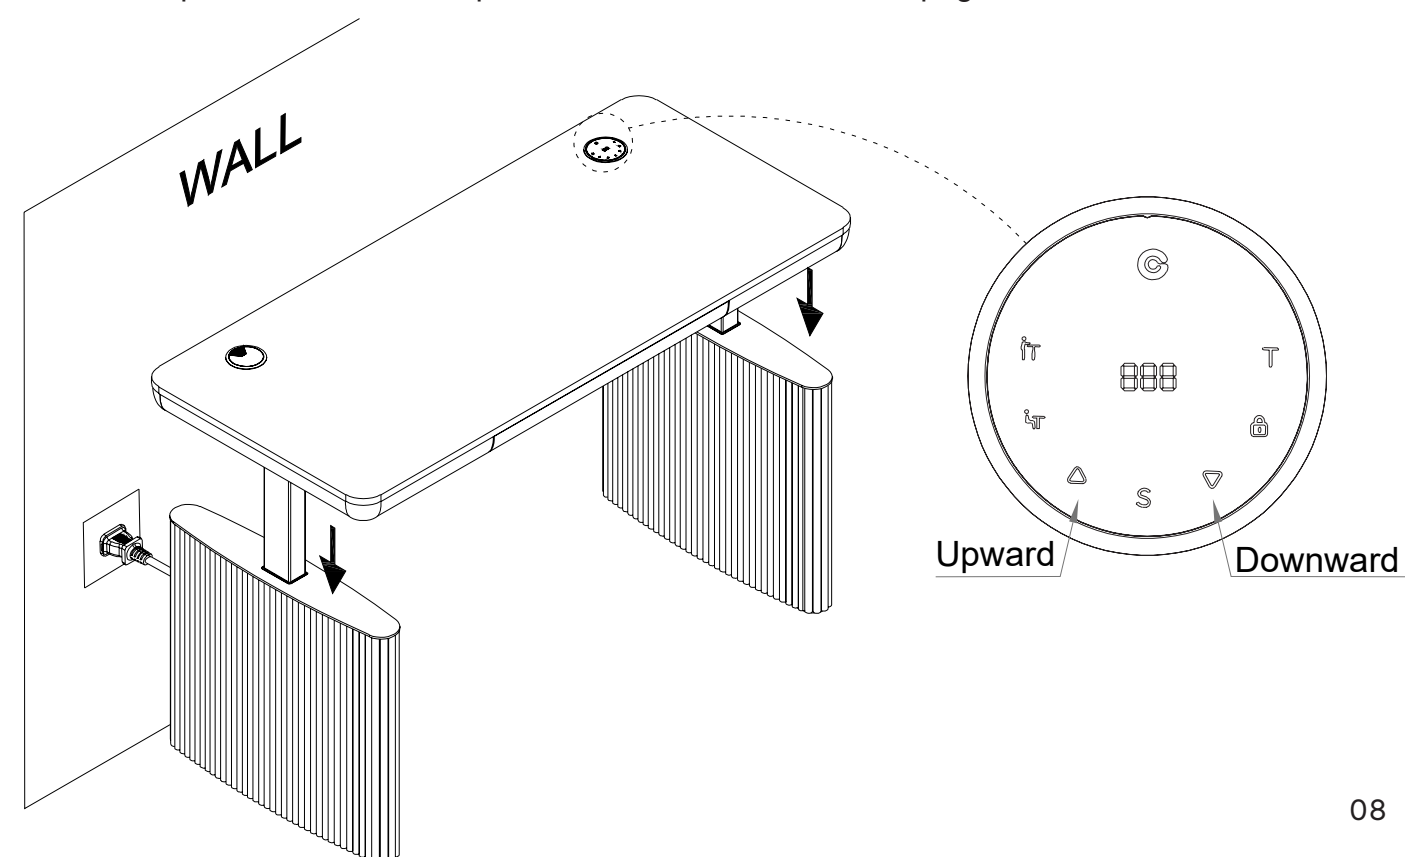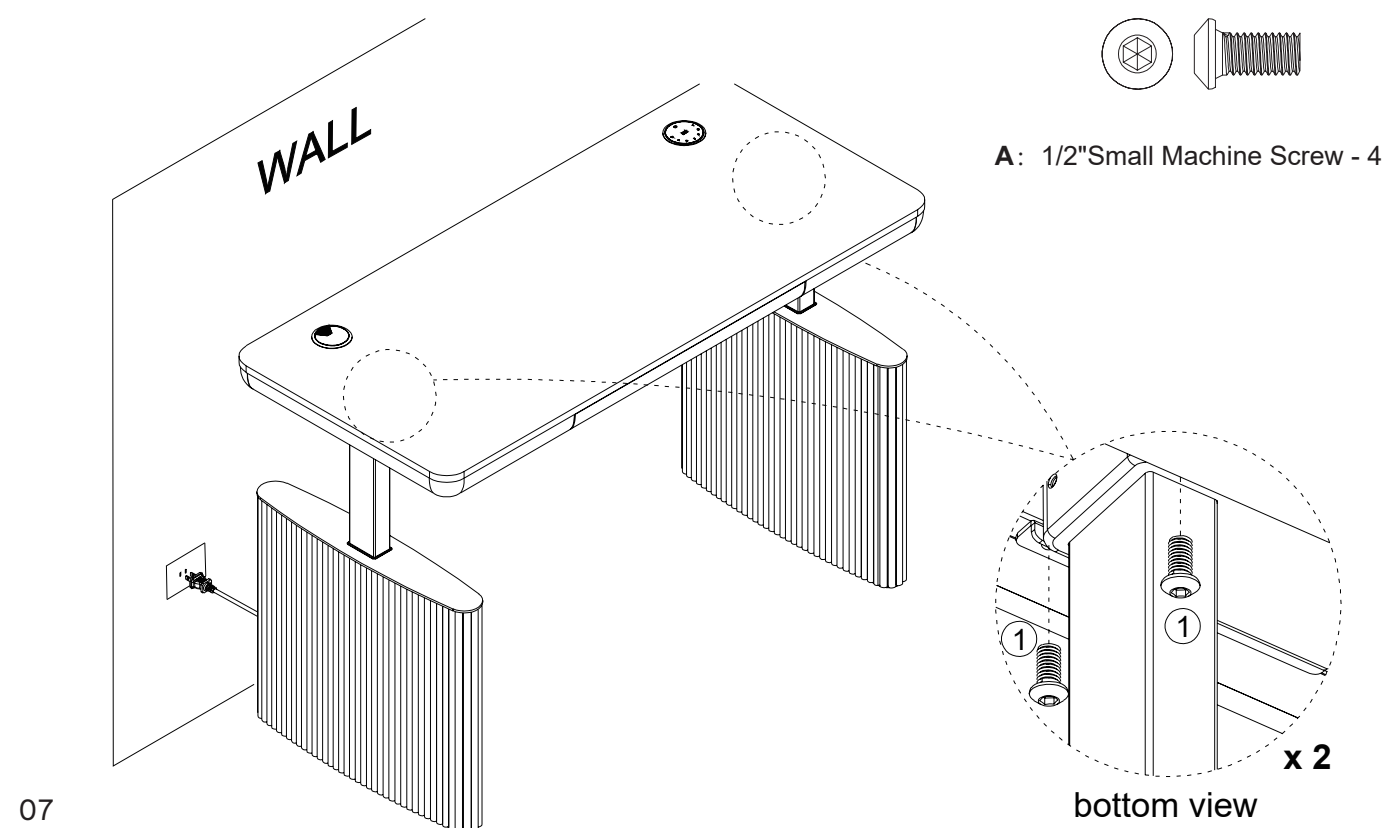

Keypad User Guide

button							
Initial value	up	down	H1 45In / 1143mm	H2 30In / 762mm	Set	Child locks	Chronograph

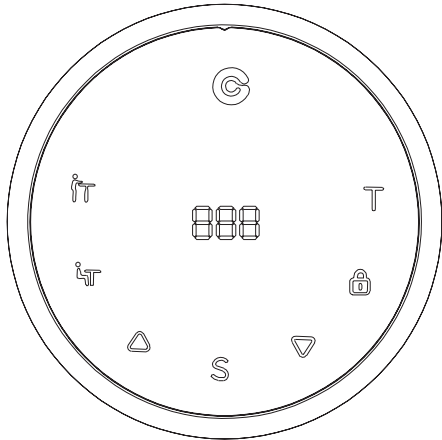

Operating Instructions

1.Desk Elevation

Press and hold the up or down button to control the desk's rise or fall. When pressing the up button, the height displayed on the display panel will increase. Similarly, pressing the down button will decrease the height displayed.

2.Memory Height Setting

In the height display mode, press a number key to set the desired height, and the desk will automatically move to the saved position. To save a height, press the memory button "S" briefly;the height number will start flashing.At this point, press sit or stand image button to save the current height to sit or down button. If no action within 6 seconds, it will exit memory mode.

3.Wake Up from Sleep Mode

After the control panel goes to sleep, press any key to light up the display.

4.Sedentary Reminder

1. In the height display mode, press the "T" key, and the screen will flash "0.5h".
- 2.Use the up (▲) or down (▼) buttons to adjust the reminder time in increments of 0.5 hours. The range is from 0.0 to 3.0 hours.
- 3.Press the "S"key to confirm and set the reminder for the selected duration.
- 4.If the reminder is set to 0.0 hours, the reminder function is disabled.
- 5.Changing the desk height during the set time will reset the reminder timer.

5.Child Lock

1. Press and hold the lock button "🔒" for 3 seconds in the height display mode, and the screen will display "LoC", locking other functions (sedentary reminders will still work). Press and hold again for 3 seconds "🔒" to unlock.
- 2.The screen will lock automatically if there is no operation for a long time.

6.Parameter Settings

1. Press and hold the settings button for 3 seconds to display "S--",
- 2.And press again to enter the settings mode. Parameters that can be set include:
 - Height display unit: Metric (SI) or Imperial (In);
 - Collision protection force: Light, Normal, Heavy, or Off;
 - Tilt protection level: Light, Normal, Heavy, or Off;

Use the back, toggle, and confirm buttons to navigate and save settings.

Main Menu Interface	Submenu Interface	Description
Unit	SI Metric	After entering, it will display the last set height unit value. Use the up (▲) and down (▼) buttons to toggle between options (SI, In). After selecting, press the "S" button to save the current selection. The current option will be displayed for 2 seconds before exiting the settings mode.
	Inch	
Collision Force	Off	After entering, it will display the last set collision force level. Use the up (▲) and down (▼) buttons to toggle between options (Off, L, N, H). After selecting, press the "S" button to save the current selection. The current option will be displayed for 2 seconds before exiting the settings mode.
	Light	
	Normal	
	Heavy	
Slope	Off	After entering, it will display the last set slope protection level. Use the up (▲) and down (▼) buttons to toggle between options (Off, L, N, H). After selecting, press the "S" button to save the current selection. The current option will be displayed for 2 seconds before exiting the settings mode.
	Light	
	Normal	
	Heavy	

7.Charging and Display

- 1.Wireless charging will be disabled when the screen is active.
- 2.After the screen turns off, placing a phone on the charger will show "AC", indicating charging is in progress. All buttons will be disabled during charging.
- 3.The screen will turn off after charging is complete.

8.Protection and Alarms

- 1.Obstacle Detection: Displays "E02". If the desk collides with something or tilts, the desk will stop and reverse.
- 2.Overheat Protection: Displays "Hot". Wait at least 18 minutes before resuming operation.
- 3.Motor Malfunction: Displays "E10". Check motor connections.
- 4.Overload Protection: Displays "E20". If triggered during upward movement, reduce the load.
- 5.Undervoltage/Overvoltage Protection: Displays "E31" or "E32". Check power connections.
- 6.Step Loss Protection: Displays "E60". Check motor consistency and connections.

9.Reset

In the case of alarms "E10", "E20", or "E60", or when the desk reaches its lowest height, press and hold the reset button for 3 seconds until "E5" (Reset) is displayed. The desk will lower to the minimum height and rebound slightly, completing the reset process.

Recycling and Disposal



This product cannot be disposed of as household waste. To prevent damage to the environment, this product should be recycled. Please use the relevant recycling systems available to you or contract the distributor or manufacturer for recycling assistance.

FlexiSpot Limited Warranty

This limited warranty offered byFlexiSpot covers defects in material or workmanship in new FlexiSpot products. This warranty extends to the original purchaser only and is non-transferable. Only consumers purchasing FlexiSpot products from authorized FlexiSpot retailers or resellers may benefit from our limited warranty.

What is Covered?

The FlexiSpot limited warranty covers our products against defects in material or workmanship as follows:

·FlexiSpot Height Adjustable Desk Frames

15 years: all metal and mechanical parts and components, including motors and electrical components of FlexiSpot Standing Desk E7 series.
10 years: all metal and mechanical parts and components, including motors and electrical components of FlexiSpot Standing Desk E5 series.
5 years: all metal and mechanical parts and components, including motors and electrical components of all other height adjustable desk except for E5, E7 series.

·FlexiSpot Sit-Stand Desktop Workstations

All standing desks purchased on or after October 5, 2016 include a 5-year warranty for the frame, medium-fiber desktop and mechanisms.

·FlexiSpot Desk Bikes

All desk bikes purchased on or after October 5, 2016 include a 3-year warranty for the frame, and a 1-year warranty for the electronics and other mechanisms.

·FlexiSpot Mini Steppers

All desk bikes purchased on or after October 5, 2016 include a 1-year warranty for the frame, and other mechanisms.

·Accessories

All monitor mounts purchased on or after October 5, 2016 include a 5-year warranty for the arms, 3-year warranty for gas spring system and mechanisms.

What are your Remedies?

FlexiSpot will replace at no charge to the consumer the defective parts only or, at FlexiSpot's option, replace any product or part of the product that is defective because of improper workmanship and/or material, under normal installation, use, service and maintenance. If FlexiSpot is unable to provide a replacement and repair is not practical or cannot be completed in a timely fashion, FlexiSpot may elect to refund the purchase price in exchange for the return of the product. In the rare event that your FlexiSpot product is defective, we will provide you with a replacement item shipped at no cost to you within the continental United States. The shipping method for replacement products is FedEx Ground, but expedited shipping is available if you choose to pay the additional expense. In addition, you will need to pay the shipping costs if any products need to be shipped to you at an address outside the continental United States.

REPAIR OR REPLACEMENT (OR, IN LIMITED CIRCUMSTANCES, REFUND OF THE PURCHASE PRICE) AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE PURCHASER. FLEXISPOT NEITHER ASSUMES NOR AUTHORIZES ANY PERSON TO CREATE FOR IT ANY OTHER OBLIGATION OR LIABILITY IN CONNECTION WITH THIS PRODUCT.

FlexiSpot Limited Warranty

What is Not Covered?

Our limited warranty does not cover any problem that is caused by:

1. Conditions, malfunctions or damage not resulting from defects in material or workmanship.
2. Conditions, malfunctions or damage resulting from normal wear and tear, improper installation, improper maintenance, misuse, abuse, negligence, accident or alteration.
3. Accessories, connected materials and products, or related products not manufactured by FlexiSpot.
4. Conditions, malfunctions or damage resulting from failure to follow the instructions and guidelines relating to the product's intended use.

Our limited warranty is void if a product is returned with removed, damaged or tampered labels or any alterations (including removal of any component or external cover).

How to File a Claim?

In order to receive the benefit of our limited warranty, you need to process your claim in compliance with the terms of this limited warranty and follow proper return procedure. To request warranty service, please contact customer service via email at contact@FlexiSpot.com or toll free at 1-855-585-5618. You will need to provide the sales receipt or other evidence of the date and place of purchase for your FlexiSpot product.

Implied Warranties and Limitation of Damages

EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ALL IMPLIED WARRANTIES (INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY, AND FLEXISPOT SHALL NOT BE LIABLE FOR ANY INCIDENTAL, INDIRECT, SPECIAL, OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LOSS OF PROFITS OR REVENUE, RESULTING FROM ANY BREACH OF EXPRESS OR IMPLIED WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY, EVEN IF FLEXISPOT HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some jurisdictions do not allow limitations on the duration of an implied warranty or the exclusion or limitation of special, indirect, incidental or consequential damages, so the above limitations or exclusions may not apply to you.

Governing Law

This Warranty shall be governed by the laws of the State of California, USA, without giving effect to any conflict of laws principles that may provide the application of the law of another jurisdiction.

How State Law Applies

This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.